

EasyReach™

Operating Instructions

USING THE LOCKING TRIGGER

1. When Trigger Lock is in the UP position, use trigger pressure only to hold or release an object. (Figure 1)
2. Slide the Trigger Lock to the DOWN position to grip and hold an object without further trigger pressure. (Figure 2)
3. To release the object, squeeze the trigger and slide the Trigger Lock UP. Then release the trigger. (Figure 2)



TO EXTEND FOLDING MODELS

1. Unfold the EasyReach so that the sections line up with each other.
2. Slide the sleeve FORWARD over the sections to secure. (Figure 3)
3. To fold again, Slide sleeve BACK, then fold the sections neatly for storage.



MAINTENANCE

The rubber cups may become worn over time. To replace, order part # RE-CUPS.

OTHER SIZES AVAILABLE

Length	Catalog #
32 inch	32RE
40 inch	40RE
60 inch – Folding Model	60REF
72 inch – Folding Model	72REF
96 inch – Folding Model	96REF
120 inch – Folding Model	120REF



General Wire Spring Co.
1101 Thompson Avenue
McKees Rocks, PA 15136